

CABIN AIR FILTERS

Passenger Compartment Air Filter - DTS & Lucerne


REMOVAL & INSTALLATION

NOTE: Manufacturer's terminology for this filter is passenger compartment air filter.

CABIN AIR FILTER

Removal & Installation


1. Remove windshield wiper arm finish cap and nut. See **Fig. 1**. Slightly rock the wiper arm on the wiper pivot shaft to remove.

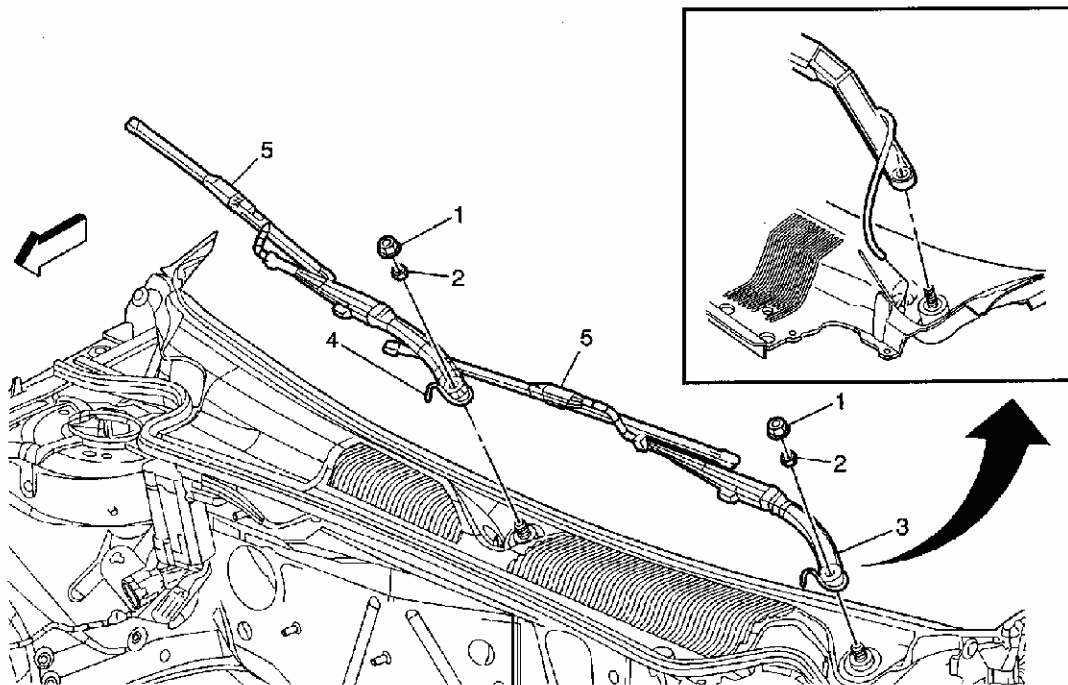

G00435492


Fig. 1: Removing Windshield Wiper Arms
Courtesy of GENERAL MOTORS CORP.

2. Open hood. On DTS, remove rear hood seal.
3. On both models, remove air inlet grille retainers and air inlet grille. See **Fig. 2** and **Fig. 3**. Disconnect the washer hose connector.

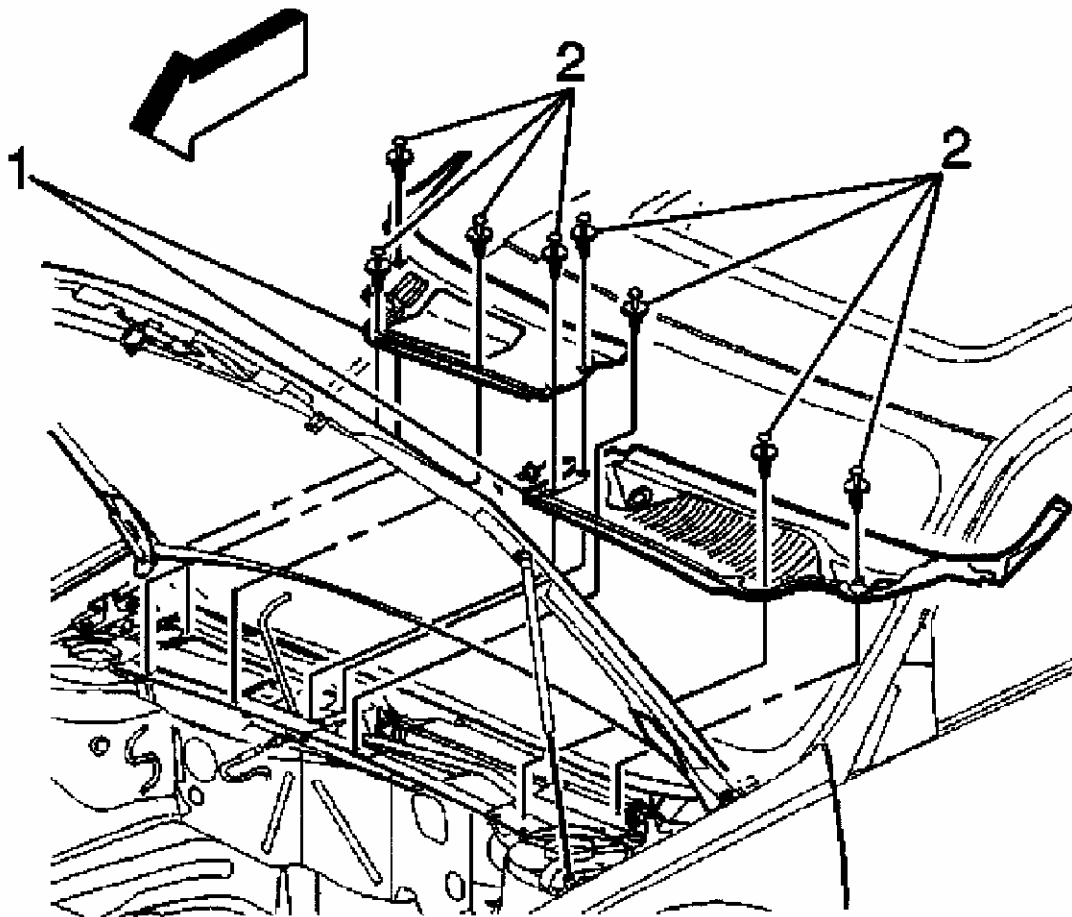

G00435496


Fig. 2: Removing Air Inlet Grille (DTS)
Courtesy of GENERAL MOTORS CORP.

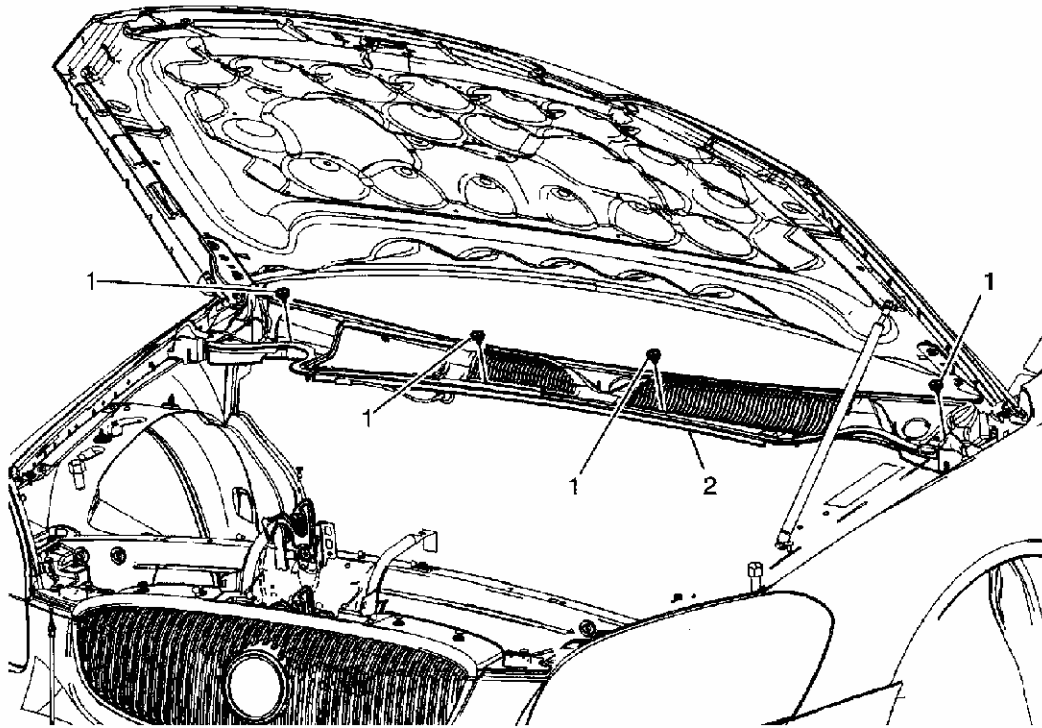

G00435493

Fig. 3: Removing Air Inlet Grille (Lucerne)
Courtesy of GENERAL MOTORS CORP.

4. Remove passenger compartment air filter. See **Fig. 4**.

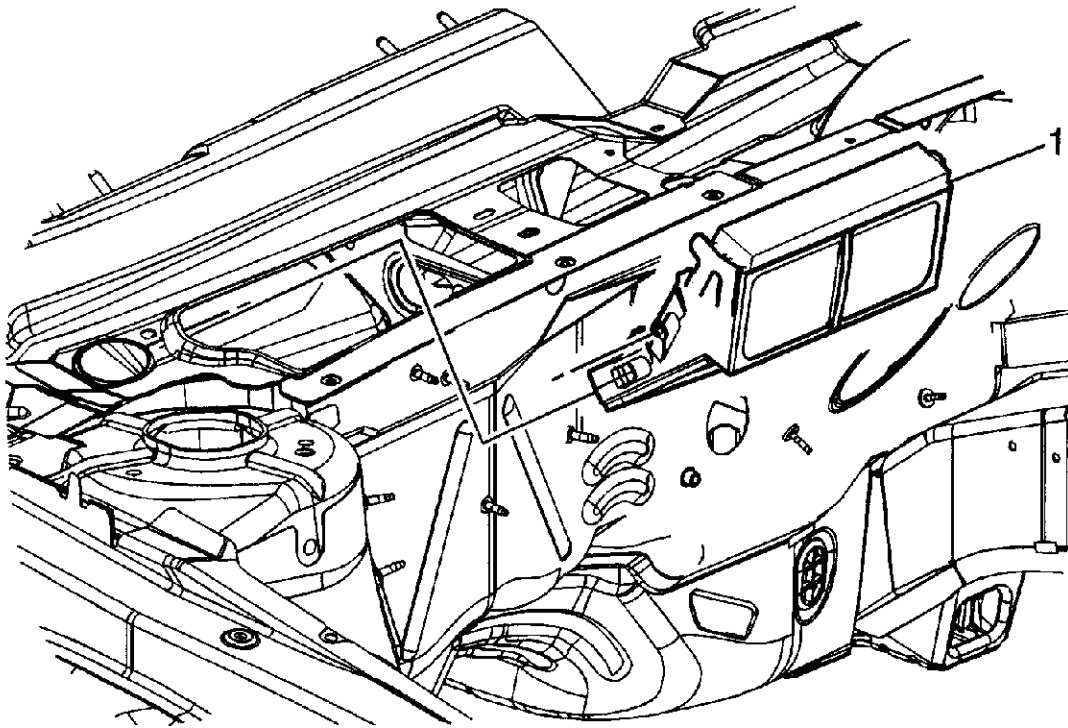

G00435494

Fig. 4: Locating Passenger Compartment Air Filter
Courtesy of GENERAL MOTORS CORP.

5. To install, reverse removal procedure.
6. Install air inlet grille. Install windshield wiper arms. Hold the wiper arm blade tip to the target points in the lower blackout area of the windshield while tightening the nut to 32 N.m (24 lb. ft.).